

# Quick-Guide for Software Ver. 3.0

Revision 002 – 13<sup>th</sup> July 2016 – Build on Systemvars 94.102

Gram Commercial A/S  
Aage Grams Vej  
6500 Vojens, Danmark  
Tel: +45 73 20 13 00  
Fax: +45 73 20 12 01  
[www.gram-bioline.com](http://www.gram-bioline.com)

  
Biostorage you can depend on

# Quick guide for software version 3.0

## Cabinet On/OFF

Press the Q-key to switch on the cabinet. Press and hold it for 6 sec. the cabinet will switch off (Stand-by). During the start-up the program variant and SW version will be presented shortly. Revision number can be presented under "Display test".

## Other short cuts

Using the key-pad functions is accessed or activated.

Key combination:	Time:	Function:
P+Q	> 3 sec.	Start or stop a defrosting cycle manually.
Q+1	> 6 sec.	Key pad lock on/off. With a lock key it's not possible to access any menu or make any changes.
(+)	-	Showing highest recorded temperature peak since the last reset of alarm history.
(-)	-	Showing lowest recorded temperature peak since the last reset of alarm history.
(+) + (-)	> 6 sec.	Re-setting alarm history.
P+1+3	> 6 sec.	Re-setting all changes in the parameters and brings the settings back to default.
P+1	> 6 sec.	Access to <b>User menu and alarm settings</b> . See more in the tables below.
P+2	> 6 sec.	Access to <b>System monitoring and presentations</b> . See more in the tables below.
P+3	> 6 sec.	Access to <b>Cooling system setup</b> . See more in the tables below.
P+4	> 6 sec.	Access to the <b>Test Program</b> . See more in the tables below.
P+5	> 6 sec.	Access to the <b>Control of the Sensors</b> . See more in the tables below.

## Changes in product setup

If changes are needed in the controllers settings, then enter the menus as according to above. The values is changed using the + and - keys. The new setting is saved by pressing the P-key. Leave the menus with Q-key.

## User menu and alarm settings

The alarm system is separated into two. One alarm system triggers alarms only locally, which means the error only is displayed. The second alarm system triggers locally and external. Error codes in the display, but also alarm activates also the potential-free alarm output. Each alarm system is working independently.

Menu access P+1 →	↓	→		
Dry cooling	dC			Activation of dry cooling program. [H1=off / H0=active]
Local alarm setting	LAL	LhL	[° C]	Setting the upper alarm limit. At alarm the display is showing: [ A2].
		LLL	[° C]	Setting the lower alarm limit. At alarm the display is showing: [ A3].
		Lhd	[min.]	Time delay for upper alarm limit.
		LLd	[min.]	Time delay for lower alarm limit.
		dA	On/off	Activation of door alarm [1=on / 0=off]. At alarm the display is showing: [ A1].
		dAd	[min.]	Time delay for door alarm.
		BU	On/off	Activation of buzzer [1=on / 0=off]. The buzzer sounds at alarms [ A1], [ A2], [ A3].
External alarm setting	EAL	EhL	[° C]	Setting the upper alarm limit. At alarms the display is showing: [ A4].
		ELL	[° C]	Setting the lower alarm limit. At alarms the display is showing: [ A5].
		Ehd	[min.]	Time delay for upper alarm limit.
		ELd	[min.]	Time delay for lower alarm limit.
		dA	On/off	Activation of door alarm [1=on / 0=off]. At alarms the display is showing: [ A1].
		dAd	[min.]	Time delay for door alarm.
		BU	On/off	Activation of buzzer [1=on / 0=off]. The buzzer sounds at alarms [ A1], [ A4], [ A5].
Sensor calibration	cAL	cA	[° K]	Offset adjustment on A-sensor. Cabinet sensor.
		cE	[° K]	Offset adjustment on E-sensor. Extra sensor (placed in air or in bottle).
		cF	[° K]	Offset adjustment on F-sensor. Sensor for frost protection.
Frost protection	FP	Act	On/off	Activation on frost protection.
		tES	On	Test the frost protection. Switch off compressor after time = C4.
		SEt	[° C]	Adjustment of cut-out for compressor.
		PrE	[...]	Presentation of F-sensor.
	ALL			Activation of escorting alarm limits. [FAS] = locked borders / [ESC] = following set point.
	dEF			Numbers of defrosting pr. day.
	dPS			Selection of sensor displaying in the display. Choose between: A, E or F.
The alarms:				Text in display and description:
Alarm messages from above.	A1			Door alarm is triggered either by the LAL or EAL alarm systems.
	A2			Alarm code triggered by a too hot temperature associated with the local alarm system.
	A3			Alarm code triggered by a too cold temperature associated with the local alarm system.
	A4			Alarm code triggered by a too hot temperature associated with the external alarm system.
	A5			Alarm code triggered by a too cold temperature associated with the external alarm system.
	A6			Frost protection has stopped compressor and ensured that the room temperature is not too cold.

## Temperature monitor and presentations

Menu for setting the monitoring, alarm history, sensor choice for alarm systems and temperature read-out.

Menu access P+2 →	↓	→		
Alarm setting	A	A1	[° C]	By overheated condenser this starts the compressor protection program
		A2	[° C]	Temperature in condenser to de-activate the compressor protection program.
		A4	On/off	Activation of alarm history [1=on / 0=off]. The program only works with alarm system: <b>LAL</b> .
		A5		Choose between A, E or F sensor for the alarm systems <b>LAL</b> and <b>EAL</b> .
Presentation in display	P	P1	[min.]	Freezing the temperature in minutes in display after a defrosting cycle.
		P2	[° K]	Freezing the temperature in display under normal run. Temperature fluctuation filter.
		P3	[sec.]	Display refresh rate.
		P4		Selection between Celsius or Fahrenheit temperature scale.

## Settings for cooling system

Menu for setting the evaporator fan, compressor and defrosting cycles.

Menu access P+3 →	↓	→	RX-model V1+	BioUltra E3+	
Compressor setting	C	C1		C1	[° K] Differential for compressor cut-in and cut-out.
		C2		C2	[° C] Maximum allowable temperature limit.
		C3		C3	[° C] Lowest allowable temperature limit.
		C4		C4	[min] Forced break time for the compressor between cut-out and cut-in
		C5			Number of condenser sensor connected to controller
		C6			[min] Permitted time the door can be open before the compressor stops.
			C7		[° K] (RX-model / Soft differential for cool/heat cut-out).
				C8	[° C] (BioUltra / Set point for condenser fan.)
				C9	[° K] (BioUltra / Cut-out differential for condenser fan).
Evaporator fan setting	F	F1		L1	[° C] Temperature for fan start after the defrosting cycle. Start of LT compressor in E3+
		F2			[min.] Time evaporator is paused while the compressor is stopped.
		F3			[sec.] Time evaporator fan is in operation while the compressor is stopped
				L4	[° C] Stop temperature in cascade heat exchanger for LT compressor – At normal run.
				L5	[° C] Stop temperature in cascade heat exchanger for LT compressor – By abnormal run.
				L6	[° K] Temperature deviation for choosing between "normal or abnormal" run.
				L7	Running mode for LT compressor [1=slave / 0=independent].
Defrosting cycle setting	d	d1			Numbers of defrosting pr. day.
		d2			[° C] Defrosting stop temperature measured in the evaporator
		d3			On/off Activating the defrosting cycle on first power-up start [0=on / 1=off]
		d4			[min.] Maximum defrosting time.
		d5			Choose between automatic [1], air [2] or electrical defrosting method [3]
		d6			[min.] Dripping time after defrosting cycle ends.
		d7			[° C] The maximum level that determines the defrosting method when d5 = [1]
		d8			[° C] Temperature in evaporator to start an extra defrosting cycle automatically.
				d10	[min.] Defrosting window.
				d11	[h] Time delay at 100 % compressor running before forced defrosting cycle.

## Test program

Individually control of relay outputs and connected external components. Select the menu item and press the P-key. The relay switches and power is connected to external component. The display shows [on]. Stop the test with Q-key.

Menu access P+4 →	↓	→	BioUltra E3+	P-key → [on] / Q-key [off]
Compressor	tC	tHt		Control of compressor and condenser fan / (BioUltra: Control of HT compressor).
Evaporator fan	tF	tLt		Control of evaporator fan / (BioUltra: Control of LT compressor).
Defr. heating element	td	td		Control of defrosting heating element. <b>Warning:</b> The heating element becomes very hot. <b>Danger!</b>
Light	tL	tCF		Control of light / (BioUltra: Control of condenser fan speed change – 900 rpm to 1200 rpm).
Alarm output	tA	tA		Control of the potential free relay out-put.
Display test	tdP	tdP		All LED's in the display will lights up for 1 sec. followed by the software revision number.

## Control of sensor and display

With this menu it's possible to have instantaneous sensor read-outs.

Menu access P+5 →	↓	P-key → [° C]	Message in display and cause
Cabinet sensor	P-A		F1 Error on cabinet sensor
Evaporator sensor	P-b		F2 Error on evaporator sensor
Condenser sensor 1	P-C		F3 Error on condenser sensor 1
Condenser sensor 2	P-d		F4 Error on condenser sensor 2
Extra/Reference sensor	P-E		F5 Error on Extra/Reference sensor
Sensor for frost protect.	P-F		F6 Error on sensor for frost protection
Overheated condenser caused by a clogged grease filter. Triggered by both C and d sensor			
BioUltra: High pressure switch has triggered by excessive pressure in the LT cooling system.			
When the door opens the symbol lights up. A too long open door this will trigger the alarm [A1].			
			F7 Overheated condenser 1 or 2.
			F8
			-0- Symbol for open door



BioStorage you can depend on

## Default factory settings

Below are all BioLine program variants shown. In the columns under each program variant, the factory settings is presented. Should any questions occur, then please take contact to BioLine Tech Support.

Systemware revision number	Refrigeration							Extended				Freezer				Heat		Extreme low temp. range		
	K2+	K4+	K5+	K6+	K8+	K9+	K70	M4+	M5+	F5+	F6+	F51	F61	F70	V1+	E1+	E3+	E4+		
Setpoint (celsius)	5	5	5	5	5	5	5	4	5	-20	-20	-20	-20	-20	5	-35	-80	-40		
Temperature range (celsius)	+20/+2	+20/+2	+20/+2	+20/+2	+20/+2	+20/+2	+15/+2	+6/+2	+20/-2	-5/-25	-5/-25	-5/-25	-5/-25	-5/-25	+45/0	-5/-38	-60/-95	-5/-45		
<b>User menu: P+1</b>																				
Dry refrigeration on=H0/Off=H1	dC																			
Thawing on/Off	UF																			
<b>Local Alarm Limits</b>	LAL																			
Upper local alarm limit (celsius)	LH							EL				EL				VH		EH		
Lower local alarm limit (celsius)	LL							EL				EL				VH		EH		
Time delay for upper alarm limit (min.)	LHd							ELd				ELd				VHd		EHd		
Time delay for lower alarm limit (min.)	LLd							ELd				ELd				VHd		EHd		
Door alarm on=1/Off=0	dA							dA				dA				dA		dA		
Time delay for open door (min.)	dAd							dAd				dAd				dAd		dAd		
Buzzer for local alarm on=1/Off=0	bU							bU				bU				bU		bU		
<b>External Alarm Limits</b>	EAL																			
Upper external alarm limit (celsius)	EH							EL				EL				VH		EH		
Lower external alarm limit (celsius)	ELL							EL				EL				VH		EH		
Time delay for upper alarm limit (min.)	EHd							ELd				ELd				VHd		EHd		
Time delay for lower alarm limit (min.)	ELd							ELd				ELd				VHd		EHd		
Door alarm on=1/Off=0	dA							dA				dA				dA		dA		
Time delay for open door (min.)	dAd							dAd				dAd				dAd		dAd		
Buzzer for local alarm on=1/Off=0	bU							bU				bU				bU		bU		
<b>Calibration of sensor</b>	CAL																			
Offset adjustment sensor A (kelvin)	CA							CE				CF				CA		CE		
Offset adjustment sensor F (kelvin)	CF							CE				CA				CF		CA		
<b>Frost Protection</b>	FP																			
Activation of frost protection On=1/Off=0	Act																			
Test of frost protection	IES																			
Setpoint of frost protection (celsius)	SET							SET				SET				SET		SET		
Display of current sensor temperature (celsius)	PRE																			
Fixed or escaping alarm limits (FAS - ESC)	ALL							SCL				SCL				SCL		SCL		
Soft chilling (soft-chill)	SCL							HCL				HCL				PCL		PCL		
Hard chilling (hard-chill)	HCL							PCL				PCL				dES		dES		
Time controlled chilling (timed-chill)	PCL							dES				dES				dPS		dPS		
Number of defrosts / 24h	dES							dPS				dPS				dPS		dPS		
Selected sensor display	E							E				E				E		E		
Possible choice for sensor displaying in display	A,E,F							A,E,F				A,E				A,E,F		A,E		
<b>Alarm &amp; presentation: P+2</b>	A																			
<b>Alarm settings</b>	A																			
Condenser monitoring alarm on (celsius)	A1							A1				A1				A1		A1		
Condenser monitoring alarm off (celsius)	A2							A2				A2				A2		A2		
Genindrædes liden for akustisk alarm (min.)	A3							A3				A3				A3		A3		
Alarm history on=1/Off=0	A4							A4				A4				A4		A4		
Selection of sensor for alarm system	AA							AA				AA				AA		AA		
Possible choice for sensor displaying in display	A,E,F							A,E,F				A,E				A,E,F		A,E		
<b>Presentation of temperature</b>	P																			
Temperature display hold after defrost	P1																			
Temperature display hold during normal operation	P2																			
Display updating frequency (sec)	P3							P3				P3				P3		P3		
Temperature display, Celsius or Fahrenheit	P4							P4				P4				P4		P4		
<b>System setup: P+3</b>	S																			
<b>Compressor settings</b>	C																			
Differential for compressor start and stop (kelvin)	C1							C1				C1				C1		C1		
Max. allowed setpoint (celsius)	C2							C2				C2				C2		C2		
Min. allowed setpoint (celsius)	C3							C3				C3				C3		C3		
Compulsory compressor pause time (min.)	C4							C4				C4				C4		C4		
No. of sensors for condenser monitoring	C5							C5				C5				C5		C5		
Door open time before compressor stops (min.)	C6							C6				C6				C6		C6		
Soft differential for cool/hot cut-out (kelvin)	C7							C7				C7				C7		C7		
Setpoint for condenser fan	C8							C8				C8				C8		C8		
Cut-out differential for condenser fan (kelvin)	C9							C9				C9				C9		C9		
<b>Evaporator fan settings</b>	F																			
Evap. fan start after defrost, and during dry refig. (celsius)	F1 (L1)							F1 (L1)				F1 (L1)				F1 (L1)		F1 (L1)		
Evap. fan pause time at compressor stop (min.)	F2							F2				F2				F2		F2		
Forc. vent. started w/ kompressor stop (sek.)	F3							F3				F3				F3		F3		
Stop temp. of LT compressor in cascade evaporator at normal deviation (celsius)	F4 (L4)							F4 (L4)				F4 (L4)				F4 (L4)		F4 (L4)		
Stop temp. of LT compressor in cascade evaporator at large deviation (celsius)	F5 (L5)							F5 (L5)				F5 (L5)				F5 (L5)		F5 (L5)		
Temp. deviation for determining between "normal" or "abnormal" run	F6 (L6)							F6 (L6)				F6 (L6)				F6 (L6)		F6 (L6)		
Operation mode for LT compressor (slave or independent)	(L7)							(L7)				(L7)				(L7)		(L7)		
<b>Defrost settings</b>	d																			
Number of defrosts / 24h	d1							d1				d1				d1		d1		
Stop temperature in evaporator during defrost (celsius)	d2							d2				d2				d2		d2		
Defrosting on/off = (p1) at power up first time	d3							d3				d3				d3		d3		
Max. allowed defrosting time (min.)	d4							d4				d4				d4		d4		
Defrosting mode (1=automatic, 2=air, 3=electrical)	d5							d5				d5				d5		d5		
Dip time after defrost stop (min.)	d6							d6				d6				d6		d6		
Limit for automatic defrosting mode (celsius)	d7							d7				d7				d7		d7		
Evaporator monitoring (celsius)	d8							d8				d8				d8		d8		
Defrost after chilling stop	d9							d9				d9				d9		d9		
Defrosting window after compressor cut-out (min.)	d10							d10				d10				d10		d10		
Time for overruled defrosting cycle at 100 % compressor running (hours)	d11							d11				d11				d11		d11		
<b>Sensor configuration</b>	St																			
St. = +25 °C / 1505 = 40 °C / 1513 = -80 °C	St							St				St				St		St		
St. = +25 °C / 1505 = 40 °C / 1513 = -80 °C	St							St				St				St		St		
St. = +25 °C / 1505 = 40 °C / 1513 = -80 °C	St							St				St				St		St		
St. = +25 °C / 1505 = 40 °C / 1513 = -80 °C	St							St				St				St		St		
St. = +25 °C / 1505 = 40 °C / 1513 = -80 °C	St							St				St				St		St		
St. = +25 °C / 1505 = 40 °C / 1513 = -80 °C	St							St				St				St		St		
<b>Other Software Features</b>	S																			
Dry Cooling	dC																			
Thaw-out	UF																			
Blaschiller																				
Compressor protection program	x																			
Demand controlled condenser fan controlled	x																			
Emergency program at defective room sensor	x																			
Evaporator surveillance program	x																			
Alarm system designed for Commercial use	x																			
Alarm system designed for BIOBASIC	x																			
Simple alarm system designed BioCompact	x																			
Advanced alarm system designed for BioLine & Biocompact II	x																			
Alarm history feature	x																			
Low temperature protection connectivity	x																			
Presenting sensor A and E in display	x																			
Presenting sensor A and F in display	x																			
Presenting sensor A, E and F in display	x																			
Current display of temperature	x																			
No evaporator sensor viable	x																			
Defrosting dot in display at defrosting cycle	x																			
Manual On/Off operation for light in glass door	x																			
Automatically cut-out for traditional light after 30 minutes	x																			
Indicator activated at low temperature protection alarm	x																			
ASDD - Delayed defrosting cycle depending on running compressor	x																			
Automatically Start-up at power-On	x																			





**LABORATORY EQUIPMENT MAINTENANCE, REPAIR, CALIBRATION AND SALES**

Established in 1987, Henderson Biomedical is the UK's leading laboratory equipment sales and service provider. Our knowledgeable team can provide you with excellent sales advice on a range of different types of laboratory equipment including centrifuges, refrigerators, freezers and heat sealers.

Henderson Biomedical is also able to provide you with first class after-sales service and calibration of your laboratory equipment. We are an **ISO 17025 (UKAS) accredited calibration test laboratory** and our team of Field Service Engineers cover the whole of the United Kingdom.

Please contact us for more information on the types of equipment we supply and the different after-sales services we can offer.

**Henderson Biomedical**

Unit 3, Swan Close  
Croydon CR0 2DZ  
United Kingdom

**Tel: 020 8663 4610**

For sales enquiries: [sales@henderson-biomedical.co.uk](mailto:sales@henderson-biomedical.co.uk)  
For all other enquiries: [info@henderson-biomedical.co.uk](mailto:info@henderson-biomedical.co.uk)  
[www.henderson-biomedical.co.uk](http://www.henderson-biomedical.co.uk)

