



HOSHIZAKI

FM-60KE-HC

Self-containing Flake ice maker. Ice production up to 65kg/24h.

MODELS AVAILABLE


☒ FM-60KE-HC

Alternative cubelet models available: CM-50KE-HC



Model code

FM - 60 KE - HC

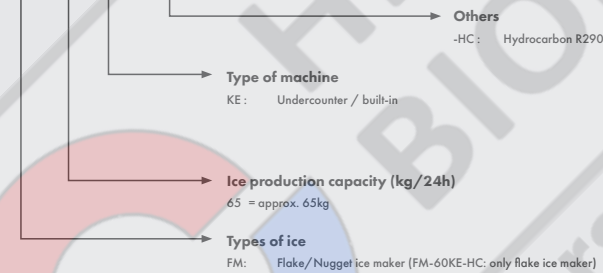

Storage capacity up to 18kg



Hoshizaki Flake Ice offers a 75% ice to water ratio and ensuring maximum cooling effect.

The Flake ice is:

• A very versatile form, suitable for a wide variety of uses. The main characteristic of Hoshizaki's Flake ice is that it avoids the "weight loss" of fresh fish and meat, usually caused by dynamic or ventilated refrigeration, by maintaining the products at the correct storage temperature, well hydrated, preserving the original characteristics and finally their commercial value.

Powered by R290 Natural Refrigerant, energy efficient and sustainable, with a GWP = 3.



PRODUCT SERIES: FM
ITEM NUMBER: F161

This Hoshizaki FM-60KE-HC is a self contained flake ice maker producing up to 65kg of high-quality flake ice per 24 hours.

Hoshizaki ice makers generate quality granular ice, such as Flake ice. The light texture of granular ice has a quick cooling effect, creating an environment of uniform temperatures, without causing unpleasant freezer burn. This is why Hoshizaki Flake ice is highly popular and considered the ideal material to prepare and layer attractive food displays. For flake ice, the extruding head is equipped with wide channels and multi-blade cutters.

Material

The exterior is made of stainless steel. The closed water circuit provides maximum protection against any type of contamination during the entire ice production process. All Hoshizaki machines are easy to use, clean and maintain.

Unique Technology

The FM series has a worktime-based replacement system, which can be monitored with an intuitive control display for preventive maintenance. Hoshizaki was the first to introduce an automated water circuit rinse cycle, to avoid harmful mineral residues from damaging the ice making system and maintaining top sanitary conditions.

Smart Design

The Flaker uses carbon graphite bushings instead of conventional ball bearings which allows the machine to work entirely without grease. Here, the absence of moving parts prevents wear and tear, while the water-lubricated bearings protect the system from unpleasant calcification and bacterial contamination.

Perfect Fit

With outside dimensions of 498 x 570 x 697mm (W x D x H), the FM-60KE-HC is compact and makes a perfect fit for small spaces.



COMMERCIAL WARRANTY AGAINST MANUFACTURING DEFECTS

PARTS **2** YEARS*

EXTERIOR FINISH

Stainless Steel,
Galvanized Steel (Rear)

* country by country agreement

Refrigerant: R290 / 50g

OPERATING CONDITIONS LIMITATIONS

- Ambient temperature range: 5°C / 40°C
- Water temperature range: 5°C / 35°C
- Water supply pressure: 0.5 bar min. / 8 bar max.
- Voltage range: rated voltage ±6%

MODEL	Cooling	Max. production in 24h Air 10°C Water 10°C (kg)	Ice storage bin capacity (kg)	Electric connection	Electrical circuit breaker protection (A)	Electrical consumption power factor 80% (W)	Water consumption liters m ³ /24h @10°C/10°C
FM-60KE-HC	Air	65	18	1/220-240V/50Hz	6	270	0.065

TECHNICAL CERTIFICATIONS



For more information visit our website at www.hoshizaki-europe.com
Hoshizaki Europe B.V. retains the right to change products and their specifications without prior notice.

Hoshizaki Europe B.V.
Burgemeester Stramanweg 101,
1101 AA Amsterdam
The Netherlands

T: +31 (0)20 691 8499
F: +31 (0)20 691 8768
sales@hoshizaki.nl
www.hoshizaki-europe.com




HOSHIZAKI

LEADING NATURALLY

FM-60KE-HC

Self-containing Flake ice maker.

Ice production up to 65kg/24h.

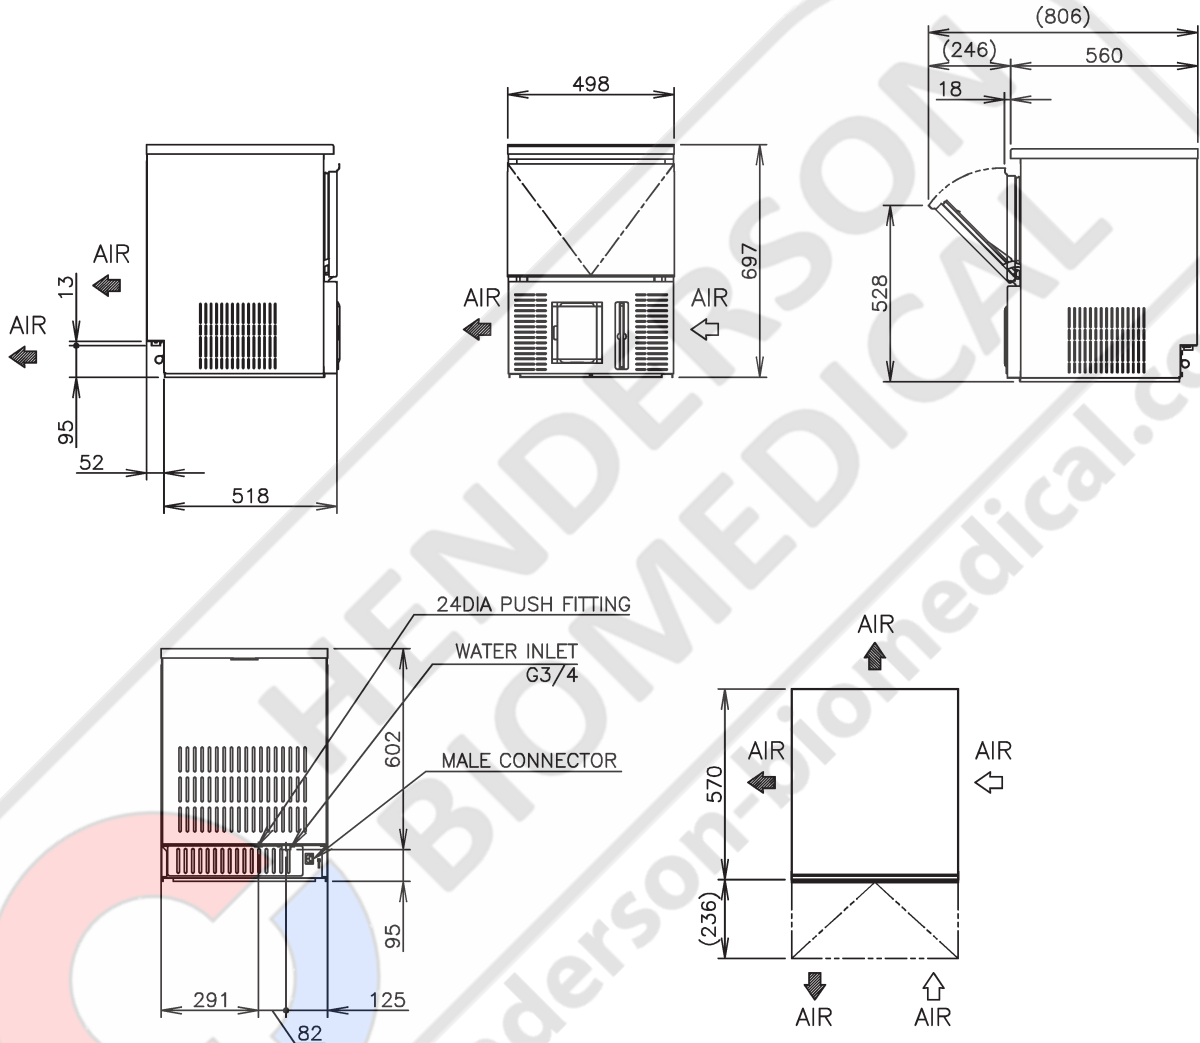

SHIPPING SPECIFICATIONS

MODEL	Net equipment dimensions		Crated dimensions		
	W x D x H (mm)	Net weight (kg)	W x D x H (mm)	Gross weight (kg)	Volume (m ³)
FM-60KE-HC	498 x 570 x 697	49	595 x 680 x 873	58	0.35

ACCESSORIES

- Scoop
- Installation Kit
- Legs (not included)



Hoshizaki Belgium:
Hoshizaki Denmark:
Hoshizaki Deutschland:
Hoshizaki France:
Hoshizaki Iberia:
Hoshizaki Italia:
Hoshizaki Middle East:

info@hoshizaki.be
info@hoshizaki.dk
info@hoshizaki.de
info@hoshizaki.fr
info@hoshizaki.es
info@hoshizaki.it
sales@hoshizaki.ae

Hoshizaki Netherlands:
Hoshizaki Norge:
Hoshizaki United Kingdom:
Hoshizaki Sverige:
Export Countries:
Other countries:

info@hoshizaki.nl
info@hoshizaki.no
uksales@hoshizaki.uk
orderSE@hoshizaki.dk
sales@hoshizaki.nl
sales@hoshizaki.nl

www.hoshizaki-europe.com



LABORATORY EQUIPMENT MAINTENANCE, REPAIR, CALIBRATION AND SALES

Established in 1987, Henderson Biomedical is the UK's leading laboratory equipment sales and service provider. Our knowledgeable team can provide you with excellent sales advice on a range of different types of laboratory equipment including centrifuges, refrigerators, freezers and heat sealers.

Henderson Biomedical is also able to provide you with first class after-sales service and calibration of your laboratory equipment. We are an **ISO 17025 (UKAS) accredited calibration test laboratory** and our team of Field Service Engineers cover the whole of the United Kingdom.

Please contact us for more information on the types of equipment we supply and the different after-sales services we can offer.

Henderson Biomedical

Unit 3, Swan Close
Croydon CR0 2DZ
United Kingdom

Tel: 020 8663 4610

**For sales enquiries: sales@henderson-biomedical.co.uk
For all other enquiries: info@henderson-biomedical.co.uk
www.henderson-biomedical.co.uk**

